
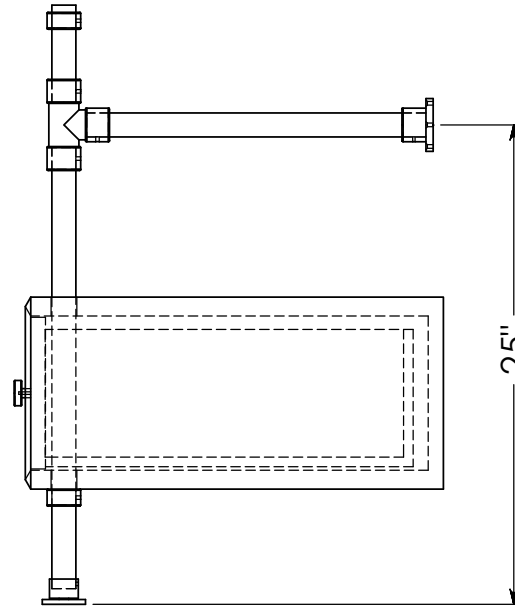


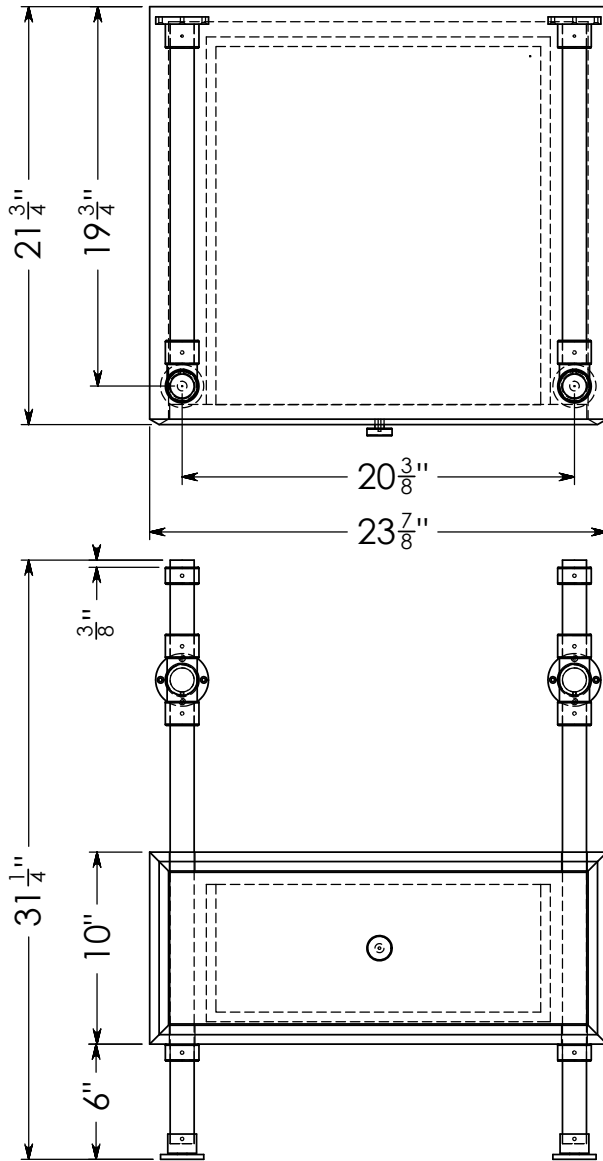

Elemental Classic Stand (#PFS-TD-24-xx) Drawer (#DWR 2410)

SIZE **A** DWG. NO. PFS-TD-24-xx-D10 - 24 Elemental Drawer Vanity


REV. **A**

WEIGHT: SHEET 1 OF 1

©2019 Stone Forest, Inc.

Due to the hand-carving of each piece, small variances in shape and size are to be expected.

DO NOT SCALE DRAWING

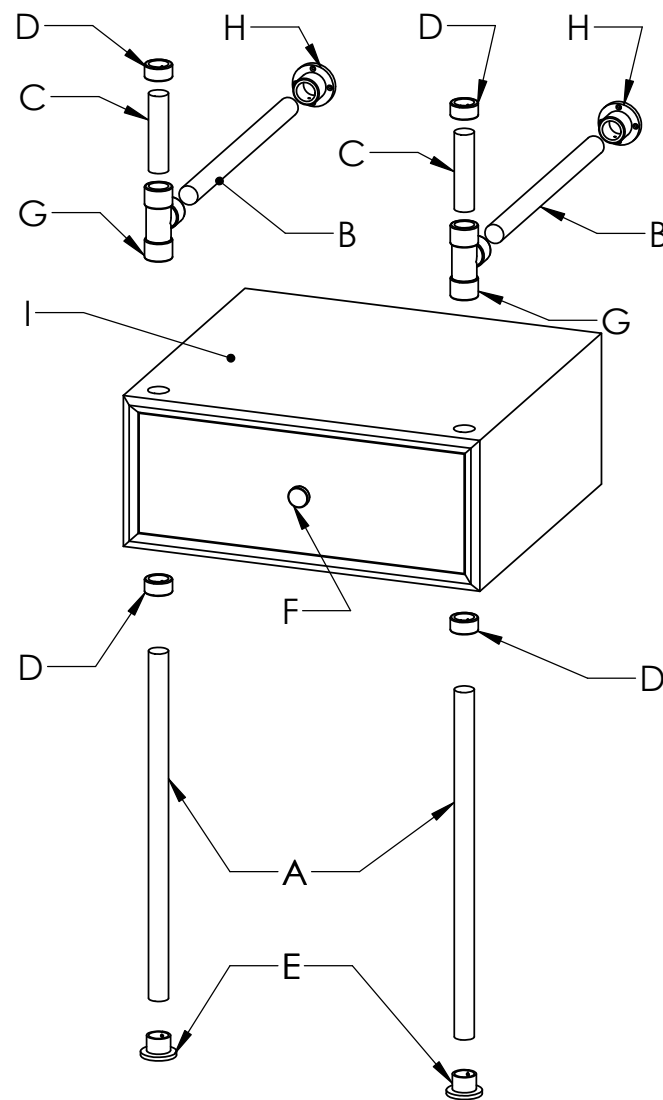

part	item code	description	qty	X
(A)	PFS-TB-23	23" TUBE	X2	
(B)	PFS-TB-18	18" TUBE	X2	
(C)	PFS-TB-5	5" TUBE	X2	
(D)	PFS-CLLR	COLLAR / SET	X2	
(E)	PFS-FOOT	FOOT / SET	X1	
(F)	PFS-KNOB	KNOB W/ SCREW	X1	
(G)	PFS-TEE	TEE	X2	
(H)	PFS-WALL	ESCUTCHEON	X2	
	2" #8 screws - BR, MB or PN - w/wall anchors [for part (H) above]		x10	
(I)	DWR-2410	24"W DRAWER X10"D	X1	
	2" #8 screws-black w/ wall anchors - to attach drawer box to wall [for part (I) above]		X3	
	1"x1"x8" aluminum wall bracket with screws and anchors for attaching sink to wall - supplied when sink is ordered with stand		x2	
allen wrench (1), white gloves (1pr), 2"x2"x6" spacers for installation (2), extra set screws (6)				


STONE
FOREST

Elemental Classic Stand (#PFS-TD-24-xx) Drawer (#DWR 2410)

DWG. NO. PFS-TD-24D10 - Classic Drawer Vanity EXP

DO NOT SCALE DRAWING

©2021 Stone Forest, Inc.

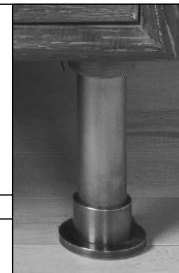



FITTINGS: CLASSIC

stand finish _____

wood finish _____

Floor level (see back of page for instructions on mounting higher up)

1. Using white gloves provided, carefully layout all brass or nickel fittings on a protected surface. Some assembly will be required using the included allen wrench.
2. Start with the legs. The bottom collars and feet need to be installed to support the drawer 4-8" from the ground depending on model and preference. Carefully slide the legs through the drawer unit from the top and then slide the collars on from the bottom followed by the feet. Tighten the feet first and then set the collars so the distance from the bottom of the feet to the bottom of the drawer (top of collar) is the same as the 2x2" supports included.
3. Set the 2pcs of 2x2 wood supports against the back wall where the console is to be installed.
4. Move the drawer and legs into position with the rear of the drawer being supported by the 2x2's. At this time the drawer should be close to level, but does not need to be exact. Remove the drawer from the cabinet box by depressing the tabs on the drawer glides (one pushes up, the other pushes down) and level the back edge of the drawer (left to right)
Once level, use the supplied screws (and anchors if needed) to attach the cabinet box to the wall. For the strongest installation, we recommend locating at least one stud along the back of the cabinet and predrilling a 1/8" hole in the cabinet back.
5. Once the drawer is attached securely to the wall you can level front to back and left to right along the front edge by loosening the collars on the legs and moving up or down slightly.

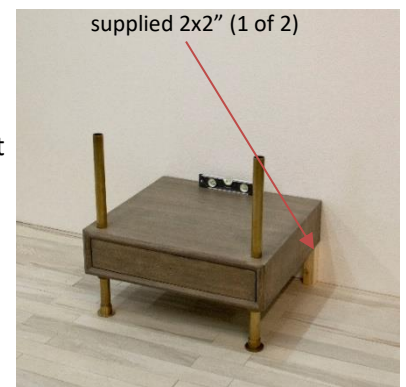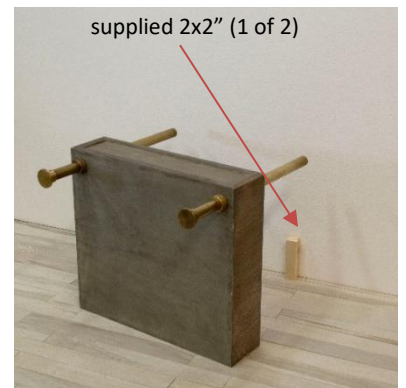

1. Slide one collar onto each leg at the desired height for the bottom of the drawer.
2. Remove the drawer from the cabinet box by depressing the tabs on the drawer glides (one pushes up, the other pushes down)
3. With the help of someone else, carefully slide the empty drawer cabinet down onto the brass legs being careful not to twist it and scratch the legs.
4. Hold the unit level against the wall. Be sure to level left to right AND front to back. Once level, use the supplied screws (and anchors if needed) to attach the cabinet to the wall. For the strongest installation, we recommend locating at least one stud along the the back of the cabinet and predrilling a 1/8" hole in the cabinet back.
5. Once the drawer is attached to the wall, check for level again. Any fine tuning can be done at the front collars using the provided allen wrench.
6. Insert the drawer back into the cabinet.

1. Using white gloves provided, carefully layout all brass or nickel fittings on a protected surface. Some assembly will be required using the included allen wrench.

NOTE: If you are installing the legs with other components, please see the individual instructions for each component




2. Assemble the legs as shown.
On the underside of the sinks there are 2-4 recessed holes to accept the top 3/8" of each leg. Measure the center to center distance on the two front holes. This will be your measurement for locating the center of each wall connection.
Set the legs up so they are plumb, level and square against the wall and attach using the supplied screws and anchors (if needed).
If drilling into wood blocking or studs, please pre-drill the holes with a 7/64" bit. This will help with the installation of the softer brass screws. If going into drywall, use the supplied anchors and pre-drill using 3/16" bit.




3. Install sink top and bracket according to the sink model.
The collars directly under the sinks do not support any weight. These can be adjusted up against the sink bottom when you are done with the final assembly.



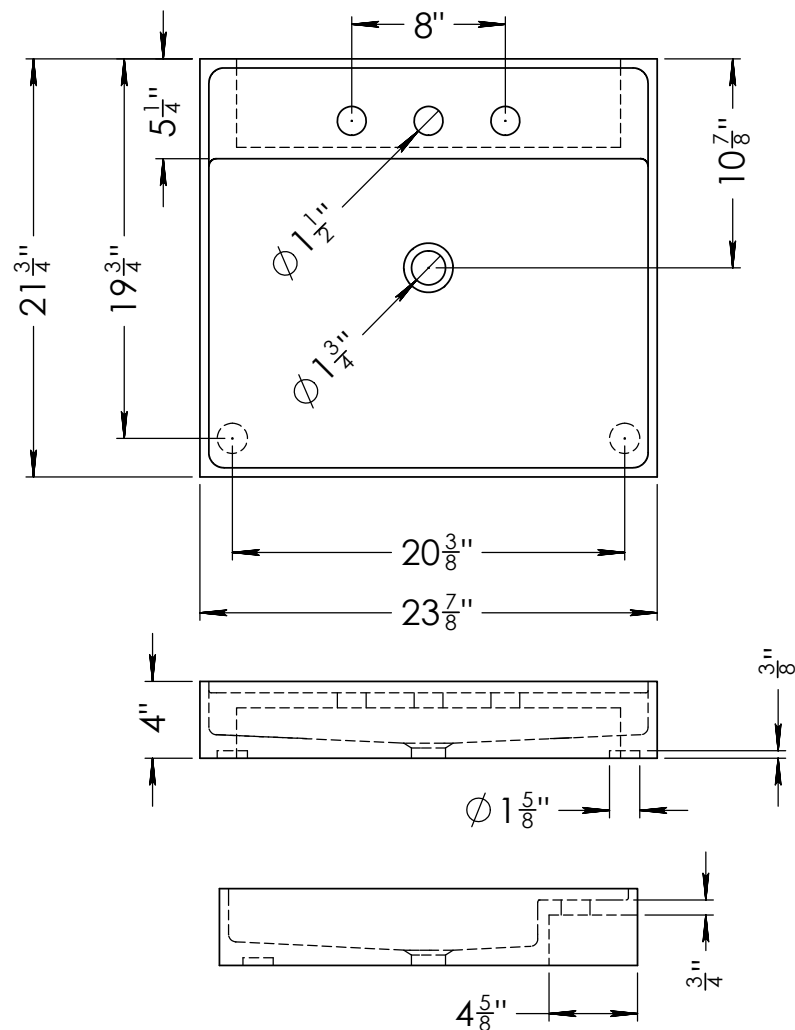

VENTUS

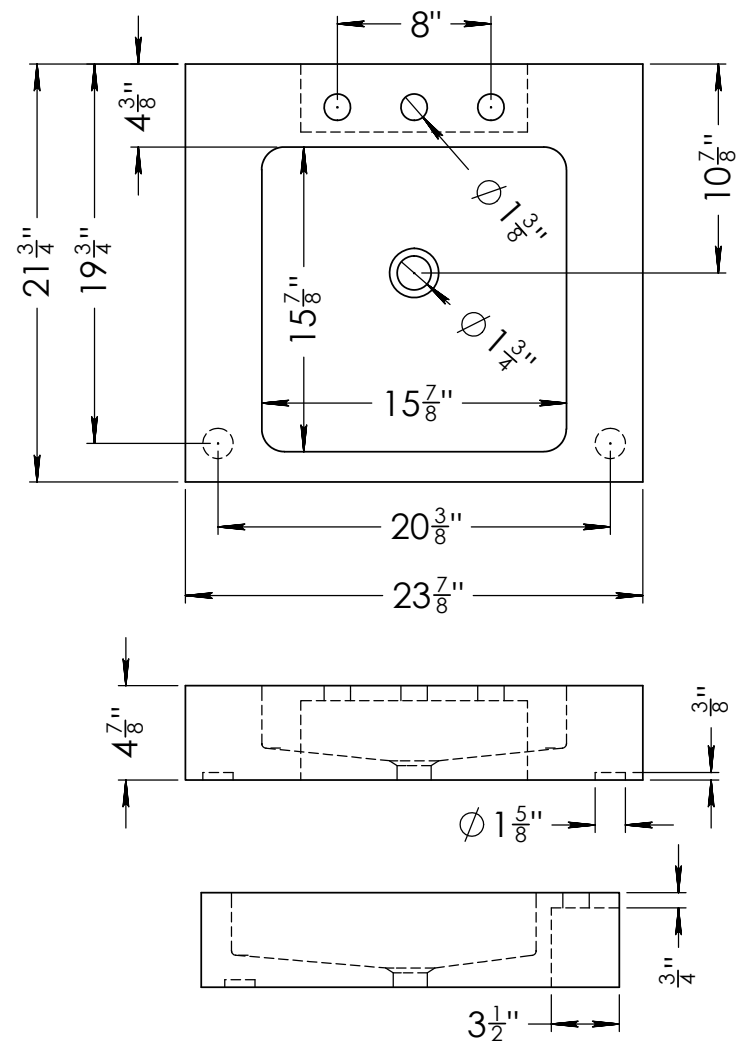

TERRA

STONE
FOREST

Ventus Bath Sink - 24"w x 22"d x 4"h
Terra Bath Sink - 24"w x 22"d x 5"h

SIZE **A** DWG. NO. TD-TRR-24 and TD-THN-FCT-24 Terra and Ventus

REV. **A**

WEIGHT: SHEET 1 OF 1

©2022 Stone Forest, Inc.

Due to the hand-carving of each piece, small variances in shape and size are to be expected.

DO NOT SCALE DRAWING

Adding a Ventus, Terra, Trough or Lumbre sink to an Elemental Stand. Install legs per directions and secure the support brackets to the wall following the below directions. The brass legs and support brackets support the weight of the sink. The Elemental collars sit directly under the sink, they are decorative and do not support the weight of the sink. The collars can be adjusted up against the sink bottom when you are done with the final assembly.

Proper installation of the provided 8" aluminum angle wall brackets is crucial for successful setup.

It is highly recommended to fasten the wall bracket to solid wood blocking within the wall. If solid blocking is not available, you should secure the bracket to the stud framing in the wall, or use appropriate screws and anchors suitable for your wall construction. Ensure the screws are of the right length to engage with the framing or blocking by at least 1-1/2 inches.

The brackets come with pre-drilled holes for easy fastening. However, if the pre-drilled holes do not align with the stud framing, you will need to drill additional holes in the bracket at the corresponding stud locations.

The wall brackets must be positioned carefully to ensure the sink sits level. Because there is a 3/8" recess in the bottom of the sink to accept the leg, the bracket should be approximately 3/8 inch lower than the top surface of the leg. Since sinks are handmade and not all floors and walls are perfectly plumb and level, the exact position must be leveled and measured on-site. This can be done by holding the sink in place and marking the wall accordingly.

Additionally, a generous bead of stone-safe adhesive should be applied to the top of the wall bracket and the tops of the legs to securely attach the sink top.

TILE WALL / DRYWALL APPLICATIONS

If the stud locations can be determined, drill holes in the tile at these locations and use appropriate size and length to engage with the framing at least 1-1/2".

For non-stud locations, drill holes into the tile and use the appropriate anchors for your wall construction.

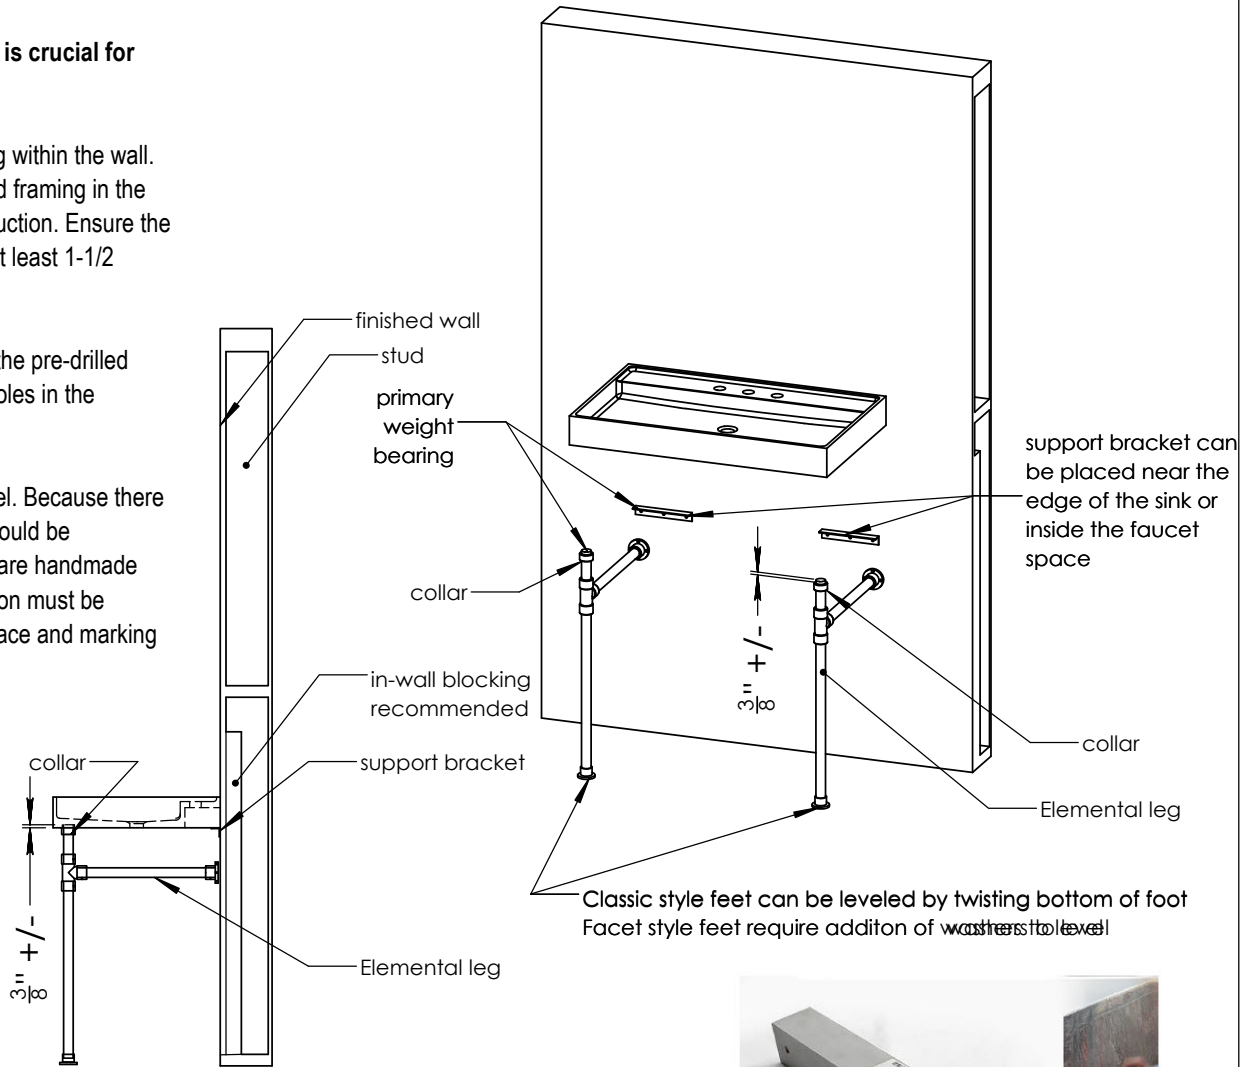


Photo of 8" aluminum bracket and screws



Installing the 8" Aluminum brackets to install Ventus, Terra, Trough or Lumbre Bath Sink.

SIZE	DWG. NO.	REV.
A	PFS-TD - Classic Vanity Legs w Ventus	A
WEIGHT:	SHEET 1 OF 1	

©2022 Stone Forest, Inc.

Due to the hand-carving of each piece, small variances in shape and size are to be expected.

DO NOT SCALE DRAWING