

STONE  
FOREST

## Elemental Lumbre Vanity PFT-ST-2615 xx


SIZE DWG. NO. REV.  
**A** PFT-ST-2615 xx Lumbre Vanity Legs **A**

WEIGHT: SHEET 1 OF 1

©2022 Stone Forest, Inc.

Due to the hand-carving of each piece, small variances in shape and size are to be expected.

DO NOT SCALE DRAWING

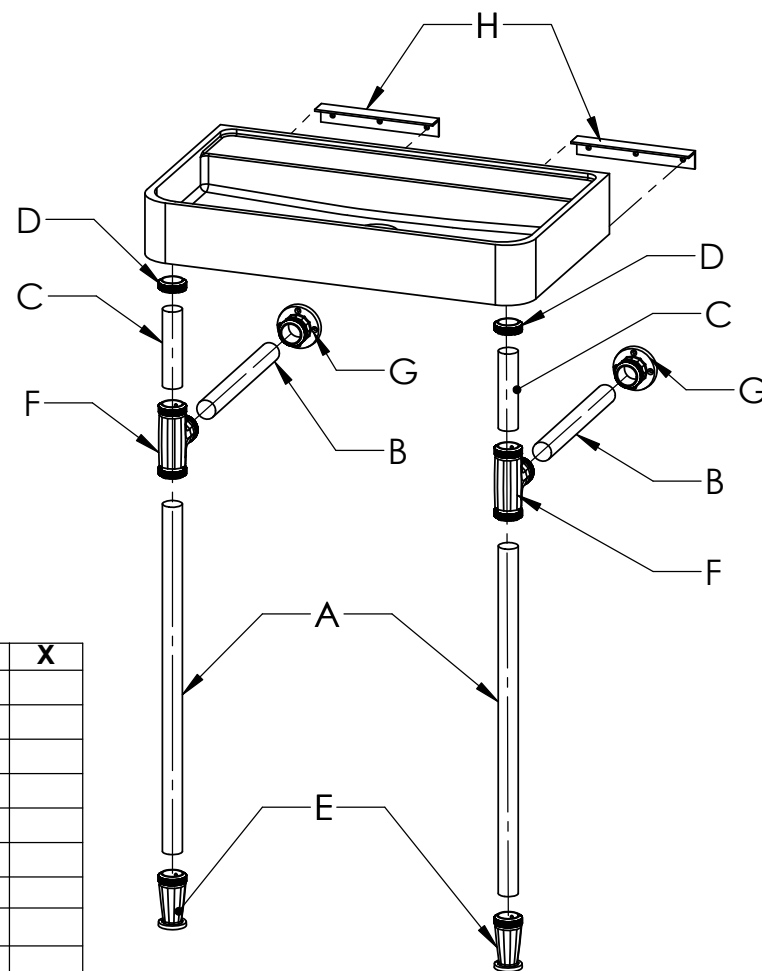

part	item code	description	qty	X
(A)	PFS-TB-23	23" TUBE	X2	
(B)	PFS-TB-11	11" TUBE	X2	
(C)	PFS-TB-5	5" TUBE	X2	
(D)	PFT-FCT-CLLR	COLLAR/ SET	X1	
(E)	PFT-FCT-FOOT	FOOT/SET	X1	
(F)	PFT-FCT-TEE	TEE	X2	
(G)	PFT-FCT-WALL	ESCUTCHEON	X2	
	2" #8 screws BR, MB or PN w/wall anchors [for part (G) above]		x10	
(H)	1"x1"x8" aluminum wall bracket with screws and anchors for attaching sink to wall - supplied when sink is ordered with stand		x2	
allen wrench (1), white gloves (1pr), extra set screws (6)				

STONE  
FOREST

Elemental Facet Lumbre Legs  
with Lumbre Sink  
TD-THN-52-26 (sink) with PFT-ST-2615 xx (legs)

DWG. NO. PFT-ST-2615 - Lumbre Facet Legs exp

DO NOT SCALE DRAWING

©2022 Stone Forest, Inc.



fittings: FACET

stand finish \_\_\_\_\_

stone finish \_\_\_\_\_

1. Using white gloves provided, carefully layout all brass or nickel fittings on a protected surface. Some assembly will be required using the included allen wrench.

NOTE: If you are installing the legs with other components, please see the individual instructions for each component



2. Assemble the legs as shown.  
On the underside of the sinks there are 2-4 recessed holes to accept the top 3/8" of each leg. Measure the center to center distance on the two front holes. This will be your measurement for locating the center of each wall connection.  
Set the legs up so they are plumb, level and square against the wall and attach using the supplied screws and anchors (if needed).  
If drilling into wood blocking or studs, please pre-drill the holes with a 7/64" bit. This will help with the installation of the softer brass screws. If going into drywall, use the supplied anchors and pre-drill using 3/16" bit.



3. Install sink top and bracket according to the sink model.  
The collars directly under the sinks do not support any weight. These can be adjusted up against the sink bottom when you are done with the final assembly.

