

part	item code	description	qty	X
(A)	PFS-TB-48	48" TUBE	X2	
(B)	PFS-TB-23	23" TUBE	X2	
(C)	PFS-TB-18	18" TUBE	X2	
(D)	PFS-CAP	CAP/SET	X1	
(E)	PFS-CLLR	COLLAR/SET	X4	
(F)	PFS-FOOT	FOOT/SET	X1	
(G)	PFS-KNOB	KNOB w/ screw	X2	
(H)	PFS-TEE	TEE	X2	
(I)	PFS-WALL	ESCUTCHEON	X2	
	2" #8 screws- BR,MB or PN w/wall anchors [for part (I) above]		x10	
(J)	PFS-DRWR-246	24" DRAWER X 6"D	X2	
	2" #8 screws black with wall anchors [for part (J) above]		x6	
(K)	PFS-WDSLF-24	24" WOOD SHELF	X2	
(L)	PFS-BRKT-6 (to attach above wood shelves to wall)	6" ANGLE BRACKET	X2	
	3/4" #8 screws- BR, MB or PN to attach bracket to shelf [for part (L) above]		х6	
	2" #8 screws black w/ wall anchors to attach bracket to wall [for part (L)]			

allen wrench (1), white gloves (1pr), 2"x2"x6" spacers for installation (2), extra set screws (6)



Elemental Classic Storage Set Item # PFS-STG-24

DWG. NO. PFS-STG-24 - Elemental Storage Set 24 exp

©2021 Stone Forest, Inc.




fittings: CLASSIC


stand finish

wood finish_

DO NOT SCALE DRAWING



Drawers and shelves set at desired height secured on stand by suppor collar.

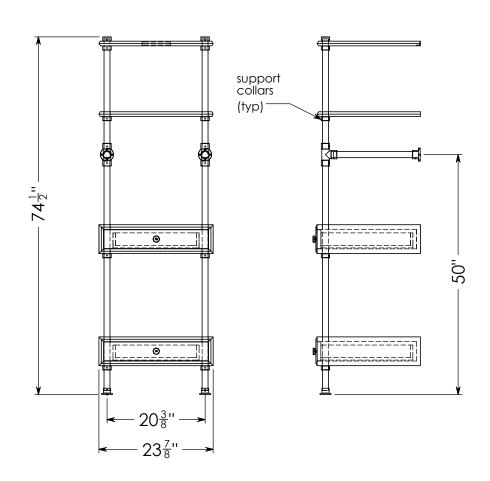



24" wide Element	Due to the hand- carving of each piece, small variances in shape and size are to be expected.	
PFS-STG-24	REV.	
WEIGHT:	SHEET 1 OF 1	
©2019 Stone Fore	DO NOT SCALE DRAWING	




Elemental Drawer


Floor level (see back of page for instructions on mounting higher up)

1. Using white gloves provided, carefully layout all brass or nickel fittings on a protected surface. Some assembly

will be required using the included allen wrench.

2. Start with the legs. The bottom collars and feet need to be installed to support the drawer 4-8" from the ground depending on model and preference. Carefully slide the legs through the drawer unit from the top and then slide the collars on from the bottom followed by the feet. Tighten the feet first and then set the collars so the distance from the bottom of the feet to the bottom of the drawer (top of collar) is the same as the 2x2" supports included.



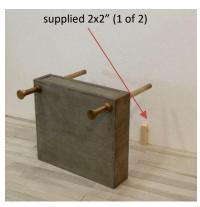

- 4. Move the drawer and legs into position with the rear of the drawer being supported by the 2x2's. At this time the drawer should be close to level, but does not need to be exact. Remove the drawer from the cabinet box by depressing the tabs on the drawer glides (one pushes up, the other pushes down) and level the back edge of the drawer (left to right)
 Once level, use the supplied screws (and anchors if needed) to attach the cabinet box to the wall. For the strongest installation, we recommend locating at least one stud along the back of the cabinet and predrilling a 1/8" hole in the cabinet back.
- 5. Once the drawer is attached securely to the wall you can level front to back and left to right along the front edge by loosening the collars on the legs and moving up or down slightly.





Elemental Drawer

Upper position (see front of page for instructions on mounting floor level)

- 1. Slide one collar onto each leg at the desired height for the bottom of the drawer.
- 2. Remove the drawer from the cabinet box by depressing the tabs on the drawer glides (one pushes up, the other pushes down)
- 3. With the help of someone else, carefully slide the empty drawer cabinet down onto the brass legs being careful not to twist it and scratch the legs.
- 4. Hold the unit level against the wall. Be sure to level left to right AND front to back. Once level, use the supplied screws (and anchors if needed) to attach the cabinet to the wall. For the strongest installation, we recommend locating at least one stud along the the back of the cabinet and predrilling a 1/8" hole in the cabinet back.
- 5. Once the drawer is attached to the wall, check for level again. Any fine tuning can be done at the front collars using the provided allen wrench.
- 6. Insert the drawer back into the cabinet.

Elemental Wood Shelf



Floor level (see back of page for instructions on mounting higher up)

- Using white gloves provided, carefully layout all brass or nickel fittings on a protected surface. Some assembly will be required using the included allen wrench.
- 2. Start with the front legs. The bottom collars and feet need to be installed to support the shelf 4-8" from the ground depending on model and preference. The height from the bottom of the feet to the top of the collars should be the same as the supplied 2x2 wood supports.



Carefully slide the legs through the shelf from the bottom.
 We included 2pcs of 2x2 wood to help with the initial location of the shelf on the wall. The height of these should match the height to the top of the collars.



4. Move the shelf and legs into position. Level the shelf along the back as well as front to back (the front feet can be twisted to help). Once the shelf is in position and leveled, mark the wall on the underside noting the position of the metal bracket. Move the stand from the wall, then remove the bracket from the shelf and mount the bracket to the wall where previously marked. Set the unit back into position onto the bracket and attach.



- 5. Once the shelf is attached to the wall, check for level again. Any fine tuning can be done at the front collars using the provided allen wrench.
- 6. Optional: slide additional collars onto legs to fit on top of the shelf. (these are not supplied with the stand and should be purchased separately)





Elemental Wood Shelf

Upper position (see front of page for instructions on mounting floor level)

- 1. Slide one collar onto each leg at the desired height for your shelf.
- 2. Carefully slide the shelf down onto the front legs being careful not to twist the shelf and scratch the legs.
- 3. With the help of someone else hold the shelf level against the wall. Be sure to level left to right AND front to back. Mark the wall on the underside noting the position of the metal bracket. Carefully remove the shelf, then remove the bracket from the shelf and mount the bracket to the wall where previously marked. Set the shelf back onto the legs and bracket and attach.
- 4. Once the shelf is attached to the wall, check for level again. Any fine tuning can be done at the front collars using the provided allen wrench.